
## Closed Condensate Recovery System using a GT10 (Stall Prevention)

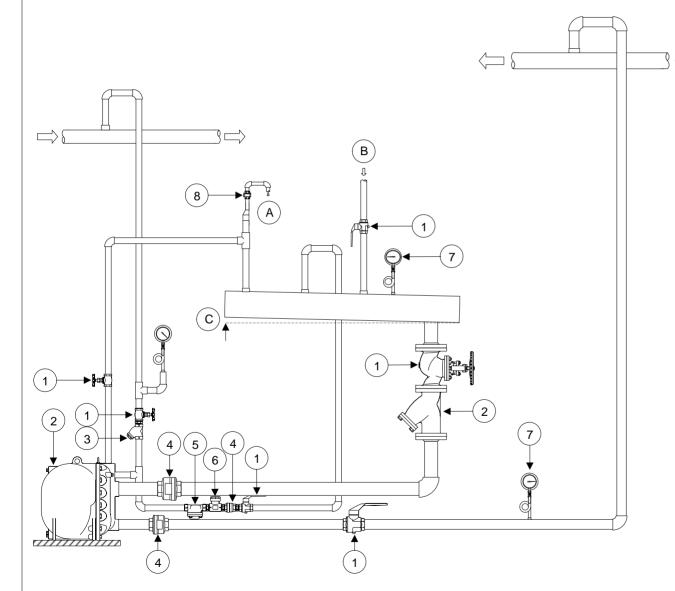

- (1) TLV Stop Valve
- (2) TLV Power Trap with Built-in Steam Trap
- 3 TLV Strainer
- (4) TLV Check Valve
- 5 TLV Free Float Steam Trap with Built-in Strainer and Air Vent
- (6) TLV Sight Glass
- (7) TLV Pressure Gauge
- (8) TLV Air Vent with Built-in Strainer
- (A) Vent (pipe to a safe area).
- (B) Condensate from equipment.
- (C) Slightly pitch to pump inlet.

NOTE: Drawing is not for installation purposes!

E005-0102-CLOSED CONDENSATE RECOVERY GT10.VSD